



Unplug the power cord from the unit




Lock the wheels



Use a Philips head or a 5/16-hex driver to unscrew the access door



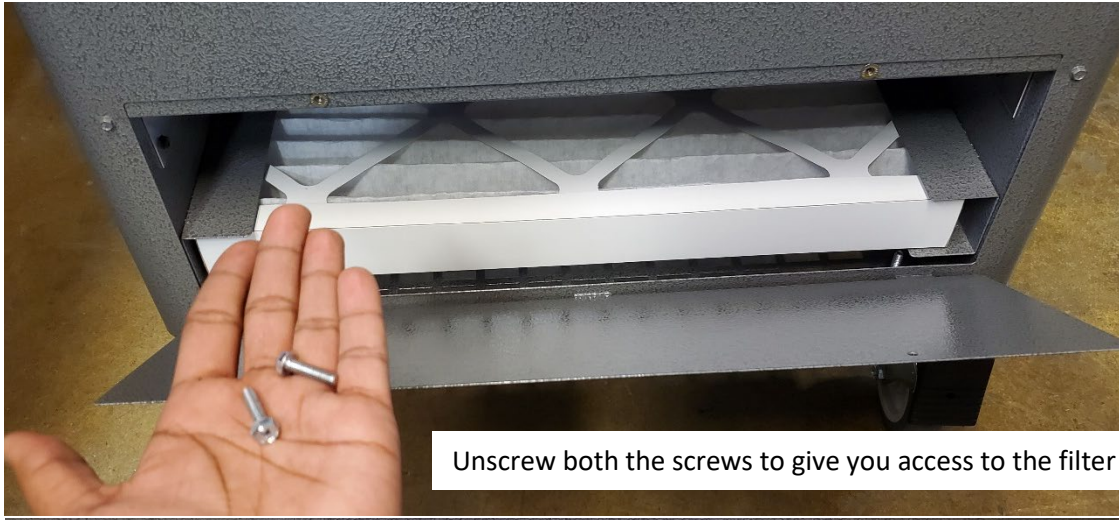

Unscrew both the screws to give you access to the filter and UV region

You may have to make some adjustments so that the access door is either completely off or fully open, like shown in the image



Carefully unroll the UV lamp. May be packaged differently. Make sure not to touch the glass portion with bare hands, always use gloves to handle UV lamps.






Line up the socket with the lamps.

You may need to rotate the lamp 90° in so that the holes line up correctly.

Once lined up – push the lamp into the socket, so that the pins are more than halfway in.

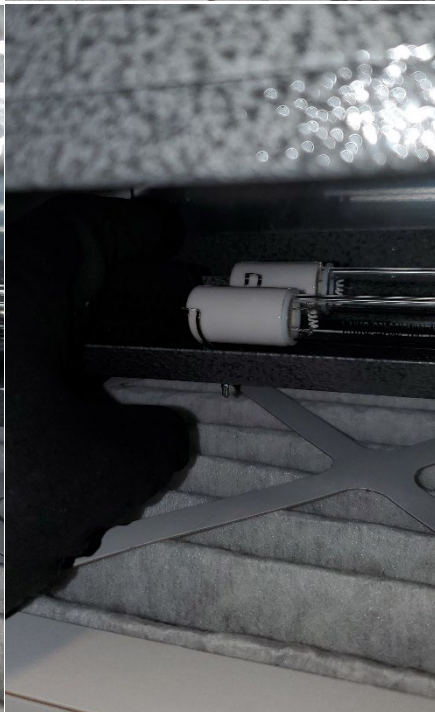

On the other end, push the lamp into the clip to secure it.

Put the access door back on and you can plug in your CT-41 unit on.